



INSTALLING INDU-POXY™ 100P DOUBLE COAT




PROPER PREPARATION

THE critical step when applying any surface.

Goal:

- clean
- flat
- dry
- room temperature.

- 1 Measure area, snap line.
- 2 "Key-in" outside edge.
- 3 Grind surface.
- 4 Degrease, flush thoroughly.
- 5 Vacuum dry, tape edges. Ready to coat.

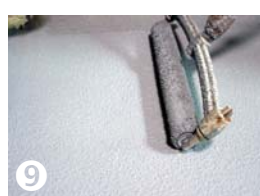

MIXING & INSTALLATION

- 1 Pour Part B-hardener INTO Part A-resin. Mix for 4 minutes.
- 2 Fill in scored edges.
- 3 Trowel out 100P @ approx. a 40mil rate.
- 4 Roll out trowel marks.
- 5 Broadcast excess of aggregate. No wet spots showing. Pull tape. Let cure overnight.
- 6 Brush off excess aggregate.
- 7 Tape edges.
- 8 Mix and apply top coat.
- 9 Roll out roller marks.

